
ASSEMBLY AND INSTALLATION INSTRUCTIONS

CH35405BN / CH35405RBZ/B

WARNING: TO AVOID RISK OF ELECTRICAL SHOCK, BE SURE TO SHUT OFF POWER WHILE INSTALLING OR SERVICING THIS FIXTURE.

NOTES: 1. Before installing, consult local electrical codes for wiring and grounding requirements.

2. Read and save this instruction.

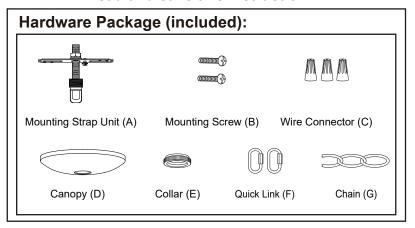

Installation Steps


Turn off the power at fuse or circuit box.

- 1. Attach the mounting strap unit (A) to the outlet box using two mounting screws (B).
- 2. Unscrew the bolt nuts out of the set screws.
- 3. Secure the upper fixture onto the main fixture.
- 4. Take an upper arm, attach it to the main fixture with the hole threading by the set screw on the lower arm and another hole threading by the set screw on the upper fixture, secure them with bolt nuts. See illustration for correct position. Repeat with the other upper arms.
- 5. Secure the loop onto the stem of the upper fixture.
- 6. Choose the length of the chain (F) you needed, then weave the fixture wire and the fixture ground wire through the chain (F), collar (G) and canopy (D).
- 7. Connect the chain (F) to the loop and the top loop on mounting strap unit (A) with two quick links (E).
- 8. Thread the fixture wire and fixture ground wire through the top loop, threaded pipe of the mounting strap unit (A).
- 9. Pull out the outlet wires and house ground wire from the outlet box.

Make wire connections using the wire connectors (C):

- ---The smooth wire (marked) from the fixture to the black wire from the power source.
- ---The ribbed wire (unmarked) from the fixture to the white wire from the power source.
- ---Attach the fixture ground wire to the mounting strap unit (A) with the green ground screw, then connect it to the house ground wire with a wire connector (C).

Carefully put the wires back into the outlet box.

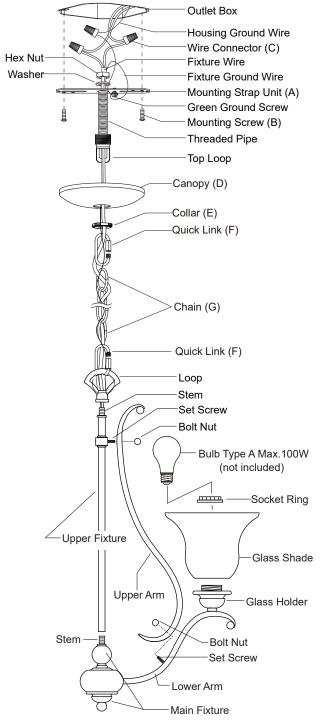





- 10. Attach the canopy (D) to the mounting strap unit (A) by inserting the top loop, then secure it with the collar (E).
- 11. Attach the glass shades to the glass holders, then secure them with socket rings.
- 12. Install the bulbs (not included). See relamping label at socket area or packaging for maximum wattage allowed.

Turn on the power at fuse or circuit box.

The following parts are available for reorder if damaged or missing.

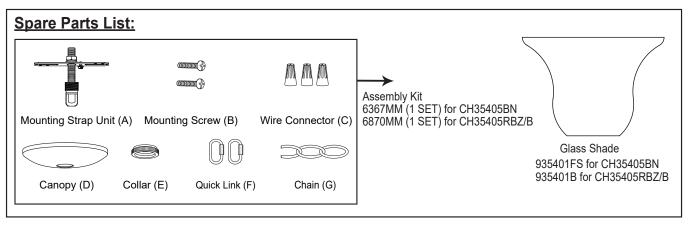

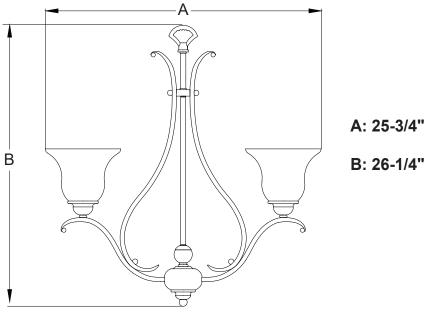

1 Year Warranty

Vaxcel warrants all of our products against defects in workmanship and finishes for one year following the date of shipment.

Exclusions: This warranty does not include the failure of products from extreme acts of nature; environmental conditions not suited for the products intended use; operation in temperatures outside of the range specified in the instruction manual; usage with improper power supply, power surges or dips. For coastal locations, some corrosion is considered normal for the environment.

Vaxcel reserves the right to repair, replace or issue a credit for any properly installed product, provided it is returned per RMA instruction. This warranty is limited to the cost of the product only and does not extend to transportation, installation or replacement costs.

How can warranty service be obtained? info@vaxcel.com 1-800-482-9235

