ASSEMBLY AND INSTALLATION INSTRUCTIONS

P0065

WARNING: BE SURE TO SHUT OFF POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE INSTALLING OR SERVICING THIS FIXTURE.

NOTE: 1. Before installing, consult local electrical codes for wiring and grounding requirements. 2. READ AND SAVE THESE INSTRUCTIONS.

Parts: Parts Number (4781MM)						Outlet Box House Groun	nding Wire
		MAA				Wire Nut (E) Fixture Grou	Inding Wire
Mounting Strap (A)	Mounting Screw (E) Wire Nut (E)	Coupling Kit (G)	Collar (H)		Lock Nut (B))
99		ę				Mounting Str	
	Nicola (O)	Green Grounding				Mounting Sc	
Lock Nut (B)	Nipple (C)	Screw (F)	Canopy	(I)		Nipple (C) Lock Nut (B))
Parts Number (4788RR) Parts Nun	ıber (4786RR)	Parts Numbe	er (4787RR)		Canopy (I)	
)				P	Collar (H) Fixture Wire	
		<u> </u>	000	<u> </u>		Coupling Kit	
12"Rod (X3)(J)	6'	Rod (K)	3"R	od (L)			
Parts Number (47	0066) Parts	s Number (4789SS)	Parts Numb	er (9462CW)			
Faits Number (47	9033) Tana			0402077)		Upper Rod	
				0		——————————————————————————————————————	
			L	V	2-	Middle Rod	
Set Screw-1 (X3))(M) Se	t Screw-2 (X3)(N)	Exterior	Glass (O)			
Parts Number (9463FO)						Threaded Pipe	
	7					Lower Rod	
	U					Threaded Pipe	
Interior Glass	(P)					Socket	
	()						
1. Rod Connection						- Sat Saraw 1 /	
a. Thread the fixture wire from the socket through the support					1	e-ma, Set Screw-1 (C	
and lower rods, then secure the lower rod onto socket using the threaded pipe.						Interior Glass	(F)
b. Thread the		hrough the th	readed pip	e and mido	le	6	
rod, and then secure the middle rod onto the lower rod using \square						Set Screw-2 ((N)
the threaded pipe.						Metal Ring	
c. Thread the fixture wire through the threaded pipe and upper rod, and then secure the upper rod onto the middle rod using							
the threaded pipe.						Exterior Gla	ss (O)
The height							
the rods. 2. Thread the fixture wire through the coupling kit, collar, canopy,						_	
		•	-	lar, canopy	/,	\supset	
then secure the rod assembly to the coupling kit. 3. Thread the fixture wire through the nipple, lock nut and mounting						Bulb T10 Max	.75W
strap. Install the lock nut onto one end of the nipple leaving ab						(not includ	
3/8" (10mm) thread exposed. Install same end of nipple by screwing into coupling kit, secure nipple by tightening lock nut.							
screwing into	coupling kit,	secure nipple	e by tighten	ing lock nu	it.		~FI

240702

- 4. Attach the nipple to the mounting strap, then secure it with lock nut.
- 5. Attach the mounting strap to outlet box by using two mounting screws.
- 6. Pull out the outlet wires and the house grounding wire from the outlet box. Make wire connections by using the wire nuts:
 - --- The black (hot) wire from fixture to the black (hot) wire from power source.
 - ---The white (neutral) wire from fixture to the white (neutral) wire from power source.
 - ---Attach the fixture grounding wire to the mounting strap with the green grounding screw. Then connect it to the house grounding wire with the wire nut.
 - Carefully put the wires back into the outlet box.
- 7. Attach the canopy to the mounting strap, and secure it with collar.
- Hold the socket into the interior glass shade, thread the three set screws-1 through each holes of interior glass shades, and then secure them into the support.
- 9. Place the interior glass shade into the center of exterior glass shade and metal ring, then thread the three set screws-2 through each holes of metal ring and exterior glass shades, secure them into the set screws-1.
- 10. Pushing up the glass shade, make the socket to show outside the glass shade. Install a bulb (not included).
 See relamping label at socket area or packaging for maximum allowed wattage. (See Fig. 1)
- 11. Turn on the power at the main fuse or circuit breaker box.
- 12. Angled mounting recommended for a vaulted or angled ceiling. (See Fig. 2)

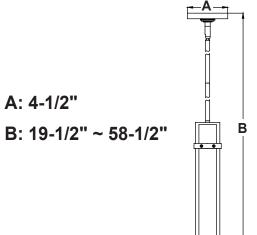


Fig. 2 Support Brace Outlet Box Canopy Coupling Kit

1 Year Warranty

Vaxcel warrants all of our products against defects in workmanship and finishes for one year following the date of shipment.

Exclusions: This warranty does not include the failure of products from extreme acts of nature; environmental conditions not suited for the products intended use; operation in temperatures outside of the range specified in the instruction manual; usage with improper power supply, power surges or dips. For coastal locations, some corrosion is considered normal for the environment.

Vaxcel reserves the right to repair, replace or issue a credit for any properly installed product, provided it is returned per RMA instruction. This warranty is limited to the cost of the product only and does not extend to transportation, installation or replacement costs.

How can warranty service be obtained? info@vaxcel.com 1-800-482-9235



