



ASSEMBLY AND INSTALLATION INSTRUCTIONS

P0240

WARNING: TO AVOID RISK OF ELECTRICAL SHOCK, BE SURE TO SHUT OFF POWER BEFORE INSTALLING OR SERVICING THIS FIXTURE.

NOTES: 1. Before installing, consult local electrical codes for wiring and grounding requirements.
2. READ AND SAVE THESE INSTRUCTIONS.


Hardware Package (included):

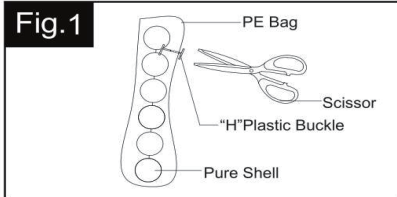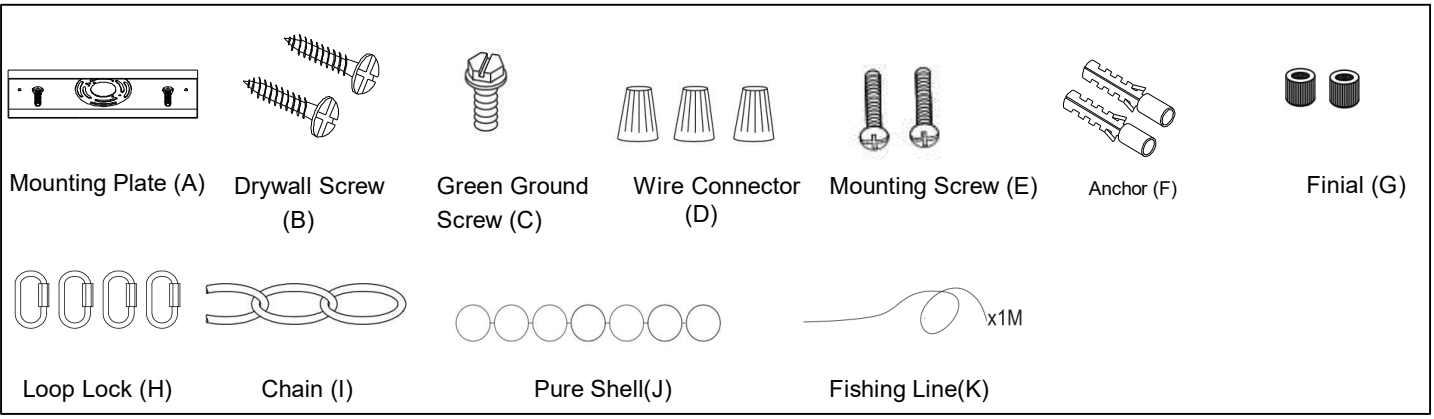

Installation Steps

Turn off the power at fuse or circuit box

1. Cut the "H" plastic buckles with scissor when take down the PE bags. (See Fig.1)
2. Set holes on the wall surface for drilling. Remove the Mounting Plate from the Canopy by removing two finials. Drill two set holes. Thread the anchors into the holes, then attach the Mounting Plate to the outlet box by using two mounting screws. Secure the two dry wall screws through the set holes into the anchors.
3. Connect the chain:
 - Determine length of chain needed to achieve desired fixture height. (To remove excess chain section, use pliers to bend link open.)
 - Weave the fixture wires through the chain, top loop and canopy.
4. Connect both ends of the chain to the loop using a loop lock.
5. Thread the fixture wire and fixture ground wire through the top loop, canopy and mounting plate.

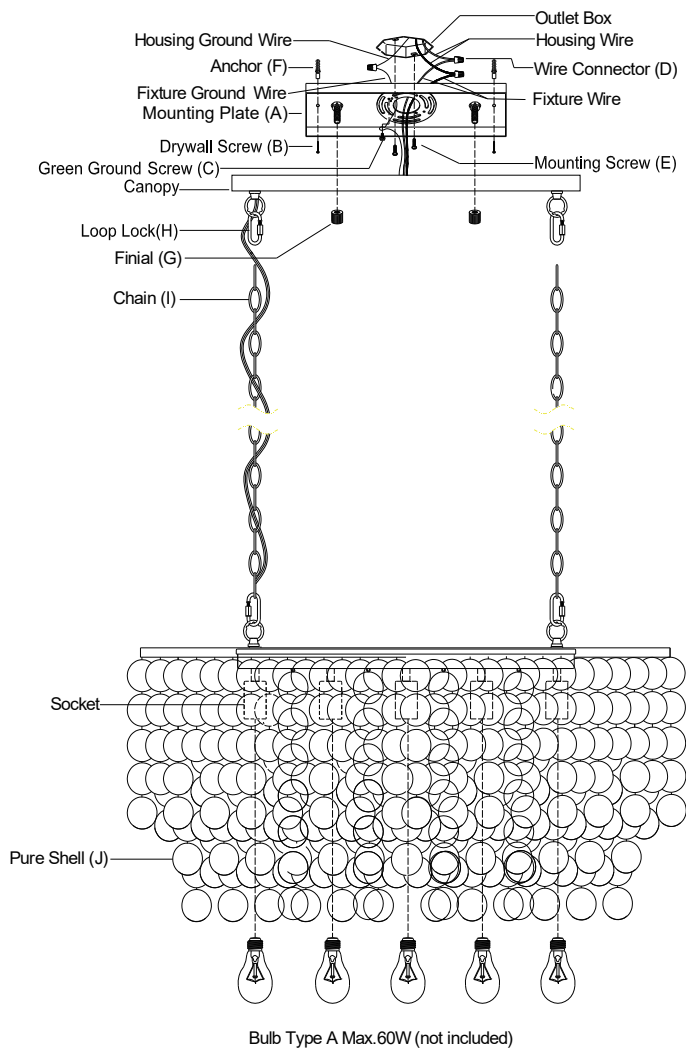

6. Pull out the source wires from the outlet box.

Make wire connections using wire connectors as follows:

---Connect the hot wire (usually black insulation) from the power source to the smooth-coated wire (marked) from the fixture.

---Connect the neutral wire (usually white insulation) from the power source to the ribbed-coated wire (unmarked) from the fixture.

---Attach the fixture ground wire (usually green insulation or bare wire) to the mounting plate with the green ground screw, or connect to the source ground wire if available.

Carefully put the wires back into the outlet box.



7. Attach the canopy to the mounting plate and secure it with two finials.

8. Install bulbs (not included). See relamping label at socket area or packaging for maximum allowed wattage.

Turn on the power at fuse or circuit box

The following parts are available for re-order if damaged or missing.

Spare Parts List:

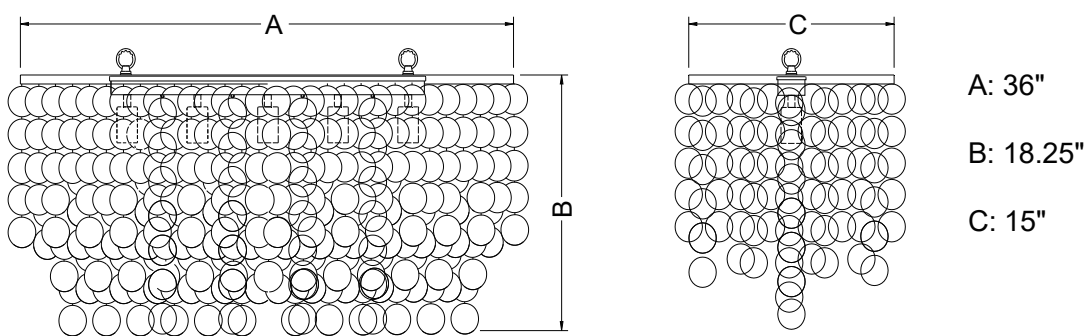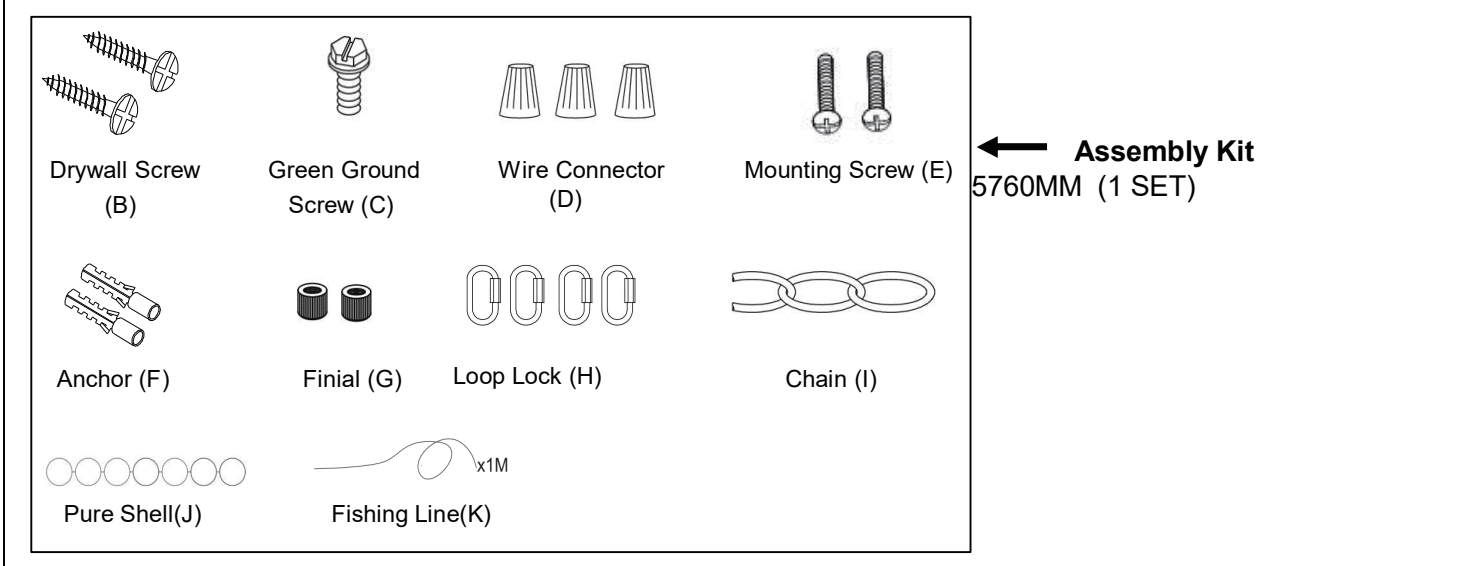

1 Year Warranty

Vaxcel warrants all of our products against defects in workmanship and finishes for one year following the date of shipment.

Exclusions: This warranty does not include the failure of products from extreme acts of nature; environmental conditions not suited for the products intended use; operation in temperatures outside of the range specified in the instruction manual; usage with improper power supply, power surges or dips. For coastal locations, some corrosion is considered normal for the environment.

Vaxcel reserves the right to repair, replace or issue a credit for any properly installed product, provided it is returned per RMA instruction. This warranty is limited to the cost of the product only and does not extend to transportation, installation or replacement costs.

How can warranty service be obtained?

info@vaxcel.com

1-800-482-9235



240702