


ASSEMBLY AND INSTALLATION INSTRUCTIONS

PD30119SN

WARNING: TO AVOID RISK OF ELECTRICAL SHOCK, BE SURE TO SHUT OFF POWER BEFORE INSTALLING OR SERVICING THIS FIXTURE.

NOTES: 1. Before installing, consult local electrical codes for wiring and grounding requirements.
2. Read and save these instructions.



Hardware Package (included):

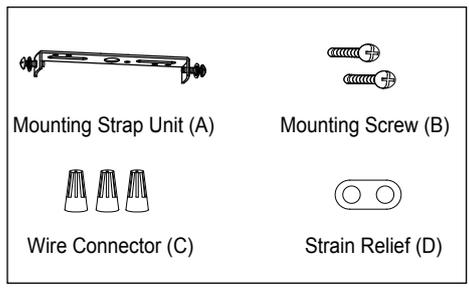

Installation Steps

Turn off the power at fuse or circuit box.

1. Unscrew the two set screws and the two washers a little, remove the canopy from the mounting strap unit (A).
2. Secure the cover to the glass shade.
3. Thread the cord through the canopy and strain relief (D). Measure the desired length of the cord (a) from the canopy to the top side of the cover and leave an additional 9" of cord (b) above the canopy (include the canopy). Then cut off the unnecessary cord. (See Fig.1)
4. Adjust strain relief (D) at 9" position from the top of the cord.
5. Mark the 3" of cord (c) from the top of the cord (b). Use a knife to peel off the insulation of the cord (c) carefully to expose the 3 wires on the inside. (See Fig.1)
Caution: Cutting too deep may cut off the three inside wires and destroy the insulation surface of the three inside wires.
6. Peel off the 3 wires from the top about 3/8" long (d) to expose the copper for wiring.
7. Attach the mounting strap unit (A) to the outlet box by using two mounting screws (B).
8. Pull out the source wires from the outlet box. Make wire connections using wire connectors (C) as follows:
 - Connect the hot wire (black insulation) from the fixture to the black wire from the power source.
 - Connect the neutral wire (white insulation) from the fixture to the white wire from the power source.
 - Connect green ground wire from the fixture to green ground wire from power source with a wire connector (C).Carefully put all of the wires back into the outlet box.

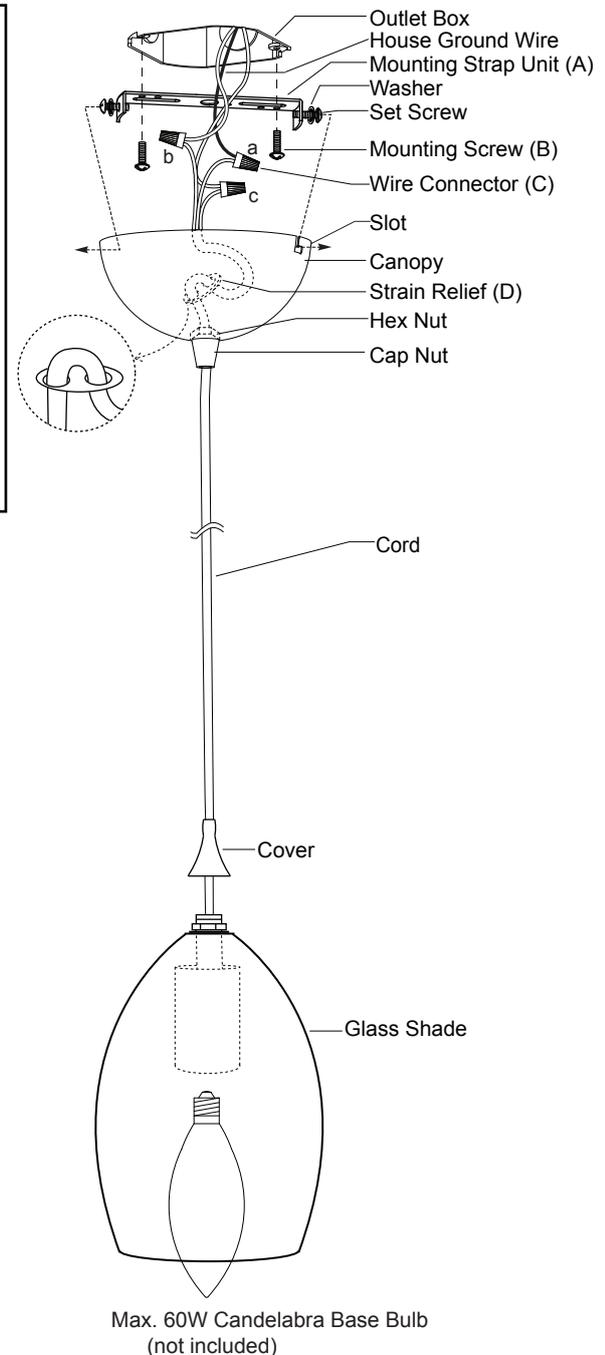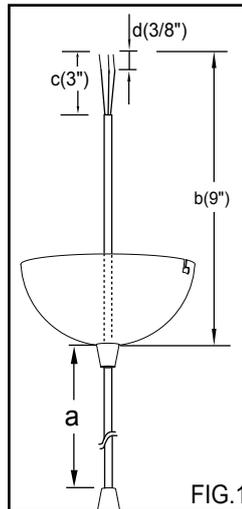


 VAXCEL


8. Pull the cord (a) down slightly until the strain relief touches the hex nut.
Note: Adjusting the strain relief of the canopy can decrease or increase the length of cord that is exposed.
9. Attach the canopy to the mounting strap unit (A) . Lift the canopy, allowing the two set screws and washers to slide into the mating slots. Rotate the canopy clockwise until both screws from the mounting strap unit (A) drop into the slot recesses. Tighten screws securely.
10. Install 1 x 60W Candelabra bulb (not included). See relamping label at socket area or packaging for maximum wattage allowed.

Turn on the power at fuse or circuit box.

The following parts are available for reorder if damaged or missing.

Spare Parts List:

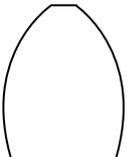 Mounting Strap Unit (A)	 Mounting Screw (B)	→ Assembly Kit 6109MM (1 SET)	 Glass Shade 10364LS
 Wire Connector (C)	 Strain Relief (D)		

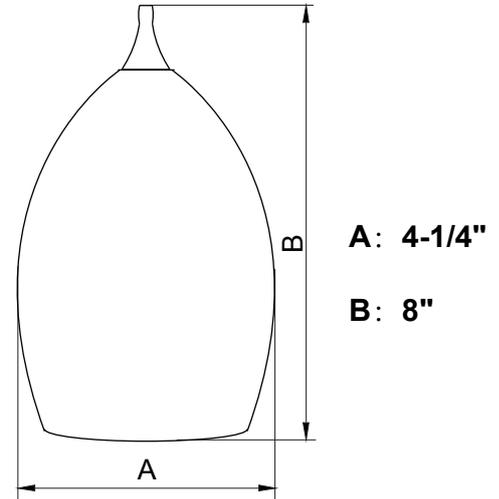

1 Year Warranty

Vaxcel warrants all of our products against defects in workmanship and finishes for one year following the date of shipment.

Exclusions: This warranty does not include the failure of products from extreme acts of nature; environmental conditions not suited for the products intended use; operation in temperatures outside of the range specified in the instruction manual; usage with improper power supply, power surges or dips. For coastal locations, some corrosion is considered normal for the environment.

Vaxcel reserves the right to repair, replace or issue a credit for any properly installed product, provided it is returned per RMA instruction. This warranty is limited to the cost of the product only and does not extend to transportation, installation or replacement costs.

How can warranty service be obtained?

info@vaxcel.com
1-800-482-9235