


# ASSEMBLY AND INSTALLATION INSTRUCTIONS

W0422


**WARNING:** TO AVOID RISK OF ELECTRICAL SHOCK, BE SURE TO SHUT OFF POWER WHILE INSTALLING OR SERVICING THIS FIXTURE.

NOTES: 1. Before installing, consult local electrical codes for wiring and grounding requirements.  
2. READ AND SAVE THESE INSTRUCTIONS.


## Hardware Package (included):



Mounting Screw (A)



Wire Connector (B)




Bolt Nut (C)



Anchor (D)



Drywall Screw (E)

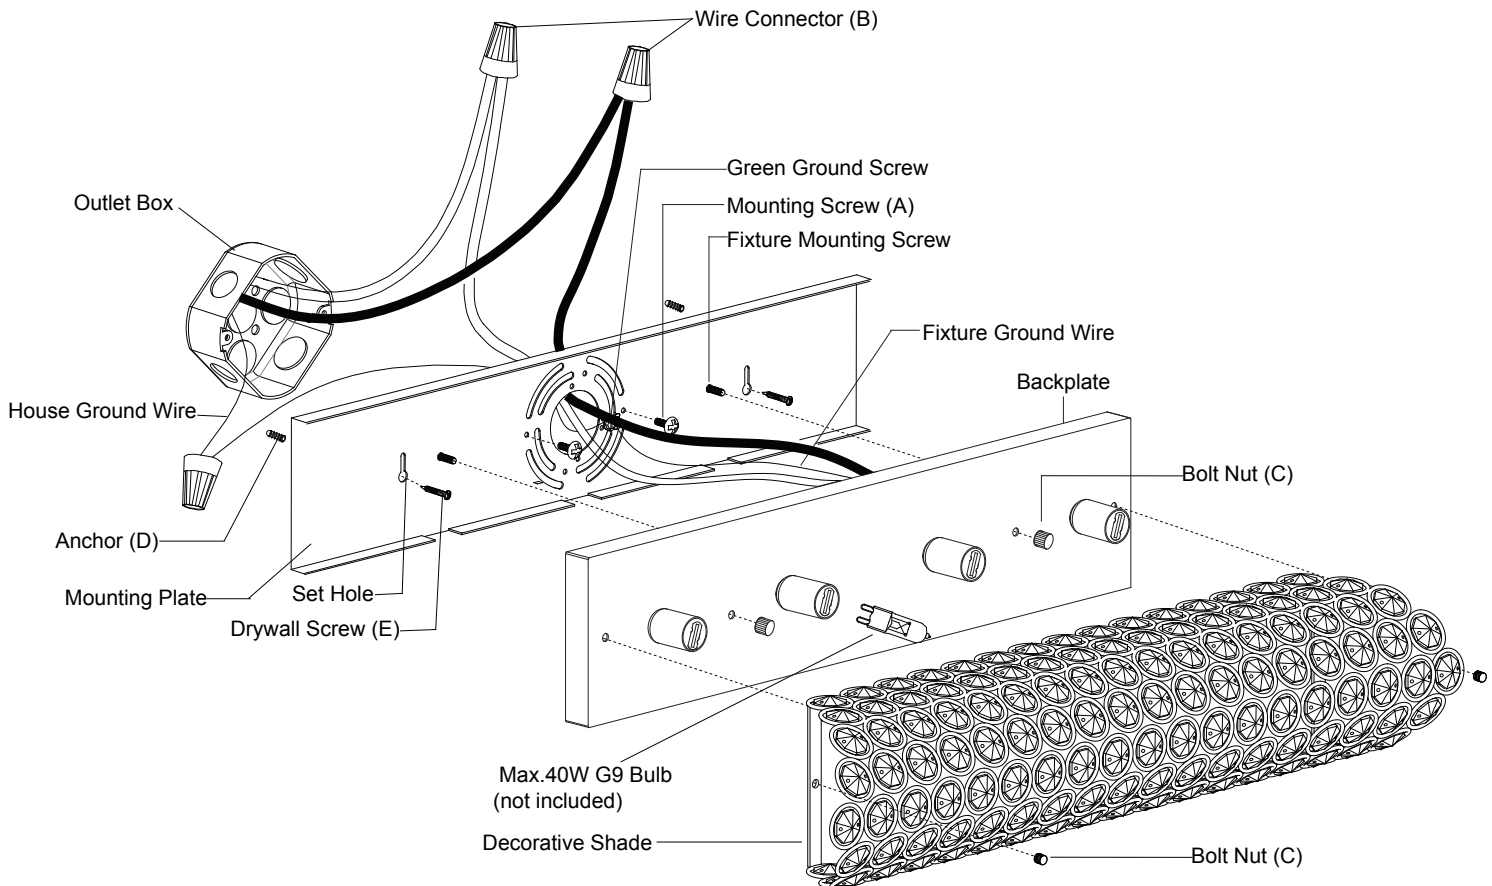

## Installation Steps

Turn off the power at fuse or circuit box.






1. Remove two bolt nuts (C) to separate the decorative shade from backplate.
2. Remove two bolt nuts (C) on backplate to separate the mounting plate from backplate.


3. Fix the mounting plate to the wall.
  - a) For wooden material:  
Attach the mounting plate to the outlet box by using two mounting screws (A) and then secure the drywall screws (E) through the set holes to the wall.
  - b) For cement and drywall materials:  
Hold the mounting plate to the outlet box and mark the outermost set holes on the wall surface for drilling. Remove the mounting plate from the outlet box. Drill both holes. Thread the anchors (D) into the holes, then attach the mounting plate to the outlet box by using two mounting screws (A). Secure the drywall screws (E) through the set holes into the anchors (D).
4. Connect fixture black wire to house black wire and fixture white wire to house white wire with wire connectors (B) provided. Connect the copper wire on the light fixture to the mounting plate by securing it with the preinstalled green ground screw, then connect it to the house ground wire with the wire connector (B). Tuck all the wires into outlet box.
5. Attach the backplate to the mounting plate, then secure it with two bolt nuts (C).
6. Install 4 X 40W G9 max. bulbs (not included). See relamping label at socket area or packaging for maximum wattage allowed.
7. Attach the decorative shade to the backplate, then secure it with two bolt nuts (C).

Turn on the power at fuse or circuit box.

The following parts are available for re-order if damaged or missing.

**Spare Parts List:**

					Assembly Kit 5696MM (1 SET)
<b>Mounting Screw (A)</b>	<b>Wire Connector (B)</b>	<b>Bolt Nut (C)</b>	<b>Anchor (D)</b>	<b>Drywall Screw (E)</b>	

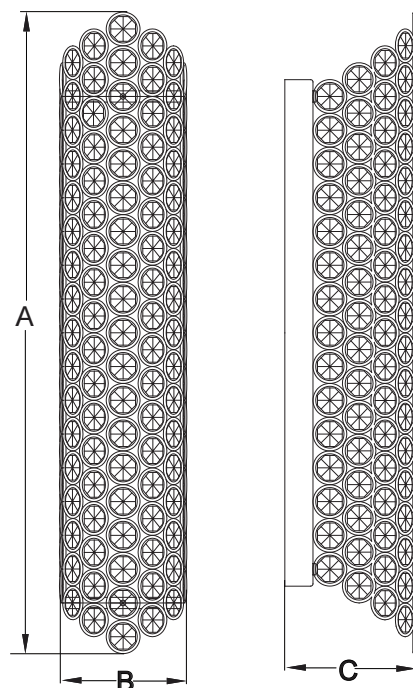

**A: 22-1/2"**  
**B: 4-3/4"**  
**C: 4-1/2"**